

Coilcraft S-Parameter Data for RF Surface Mount Inductors 0201DS Series Chip Inductors

Coilcraft, Inc.
Version 0201DS June, 2016


Coilcraft two-port S-parameter data files are based on empirical measurements of Coilcraft RF Surface Mount Inductors. The data files are used as "black box" descriptions, thus reducing complexity in circuit modeling. For one-port applications, simply connect one terminal of the component to ground in your circuit simulator software.

The data files represent de-embedded measurements. Effects due to customer circuit board traces, board materials, ground planes, or interactions with other components are not included and can have a significant effect when comparing the S-parameters to measurements of the inductors using typical production verification instruments and fixtures.

Typically, the Self Resonant Frequency (SRF) of the component model will be higher than the measurement of the component mounted on a circuit board. The parasitic reactive elements of a circuit board or fixture will effectively lower the circuit resonant frequency, especially for very small inductance values. Since data sheet specifications are based on typical production measurements, and the S-parameter models are based on de-embedded measurements as described below, the S-parameter model results may be different from the data sheet specifications.

S-parameter modeling method

The measurements for this series were made over a brass ground plane, with each component centered over a 0.010 inch wide air gap, as illustrated below. The test pads were (50 Ohm) 30 mil wide traces of tinned gold over 25 mil thick alumina, and were not included in the gap. The TRL* calibration plane is also illustrated below.

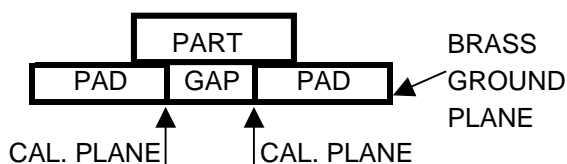

The S-parameters were generated by matching a simulation model as closely as possible to an average of the original measurements. The model was then used to create the final S-parameters. This method results in a model that represents as closely as possible the typical frequency-dependent behavior of the component up to a frequency just above the self-resonant frequency of the model. The valid frequency range for each part is specified in Table 1 below.

Coilcraft S-Parameter Data for RF Surface Mount Inductors
0201DS Series Chip Inductors

Table 1
Valid Frequency Range of S-parameters

Part Number	Range (GHz)	Part Number	Range (GHz)	Part Number	Range (GHz)
0201DS-0N5	0.001 – 26	0201DS-4N9	0.001 – 16	0201DS-7N7	0.001 – 14
0201DS-0N6	0.001 – 26	0201DS-5N0	0.001 – 16	0201DS-7N8	0.001 – 14
0201DS-1N3	0.001 – 26	0201DS-5N1	0.001 – 16	0201DS-7N9	0.001 – 14
0201DS-1N4	0.001 – 26	0201DS-5N2	0.001 – 16	0201DS-8N0	0.001 – 14
0201DS-1N5	0.001 – 26	0201DS-5N3	0.001 – 16	0201DS-8N1	0.001 – 13
0201DS-2N2	0.001 – 20	0201DS-5N4	0.001 – 16	0201DS-8N2	0.001 – 13
0201DS-2N3	0.001 – 20	0201DS-5N5	0.001 – 16	0201DS-8N3	0.001 – 13
0201DS-2N4	0.001 – 20	0201DS-6N7	0.001 – 15	0201DS-8N4	0.001 – 13
0201DS-2N5	0.001 – 20	0201DS-6N8	0.001 – 15	0201DS-8N5	0.001 – 13
0201DS-3N3	0.001 – 16	0201DS-6N9	0.001 – 15	0201DS-8N7	0.001 – 12
0201DS-3N4	0.001 – 16	0201DS-7N0	0.001 – 15	0201DS-9N0	0.001 – 11
0201DS-3N5	0.001 – 16	0201DS-7N1	0.001 – 15	0201DS-9N4	0.001 – 11
0201DS-3N6	0.001 – 16	0201DS-7N2	0.001 – 14	0201DS-9N6	0.001 – 11
0201DS-3N7	0.001 – 16	0201DS-7N3	0.001 – 14	0201DS-11N	0.001 – 10
0201DS-3N8	0.001 – 16	0201DS-7N4	0.001 – 14	0201DS-12N	0.001 – 10
0201DS-3N9	0.001 – 16	0201DS-7N5	0.001 – 14	0201DS-13N	0.001 – 10
0201DS-4N8	0.001 – 16	0201DS-7N6	0.001 – 14	0201DS-14N	0.001 – 10

How to use the files

The chip inductor data file names have the format XXWWZZZ . S2P:

XX = the first two digits of the inductor part number

WW = the specific inductor series (CS, HS, PS, CT, HT, LS)

ZZZ= the nominal inductance value stated on the data sheet

For example, if you were interested in a Coilcraft 0201DS chip inductor with an inductance of 5.2 nH, the file you would choose is 02DS5N2.S2P

Coilcraft S-Parameter Data for RF Surface Mount Inductors 0201DS Series Chip Inductors

S-parameter file description

All of the S-parameter data files are in the TouchStone format. The following is a typical data segment of a two-port file:

```
# MHZ  S  MA  R  50
!Freq  MagS11  AngS11  MagS21  AngS21  MagS12  AngS12  MagS22  AngS22
1      0.001  59.879  1.000  -0.036  1.000  -0.036  0.001  59.879
22.19  0.014  83.698  0.999  -0.798  0.999  -0.798  0.014  83.698
43.38  0.027  84.582  0.998  -1.558  0.998  -1.558  0.027  84.582
....
```

The first line (header) describes the frequency units, parameter, measurement format and characteristic impedance of the measurement (50 Ohms).

The first column is the frequency in MHz. The next columns are the S-parameters as described in the column headings.

Disclaimer

Coilcraft makes every attempt to provide accurate measurement data and software, representative of our components, in a usable format. Coilcraft, however, disclaims all warrants relating to the use of its data and software, whether expressed or implied, including without limitation any implied warranties of merchantability or fitness for a particular purpose. Coilcraft cannot and will not be liable for any special, incidental, consequential, indirect or similar damages occurring with the use of the data and/or software.